

Roof Cap Installation Instructions

The roof cap is used when installing your Modern Sauna outdoors. It will keep water from entering your sauna and will withstand moderate snow accumulations. Follow these simple steps when installing your roof cap.



#1 Place stringers on top of the roof cross-members after the sauna is assembled.




#2 Insert the pre-cut foam support panels between the stringers.



#3 Lay the pre-cut plastic roof cap over the roof allowing for an equal overhang around the sauna.



#4 Place a bead of caulk over the wall section ends and let the roof cap settle into the caulk.

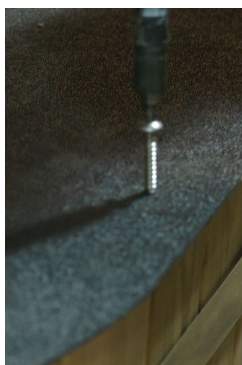

#5 Further fasten the roof cap to the wall section ends with a screw positioned every 12". Place a small amount of silicone over the screw head. The roof cap installation is now complete.

Note: The overhang provides a drip edge so that water does not run down the side of the sauna walls and excessively stain the wood. However, if you prefer a flush look, simply trim the plastic roof cap with a utility knife so that it is flush with the sauna walls.

Note: The 8' Modern Sauna will use two plastic roof caps and will overlap in the center.